


LLANDOW

SET UP GUIDE

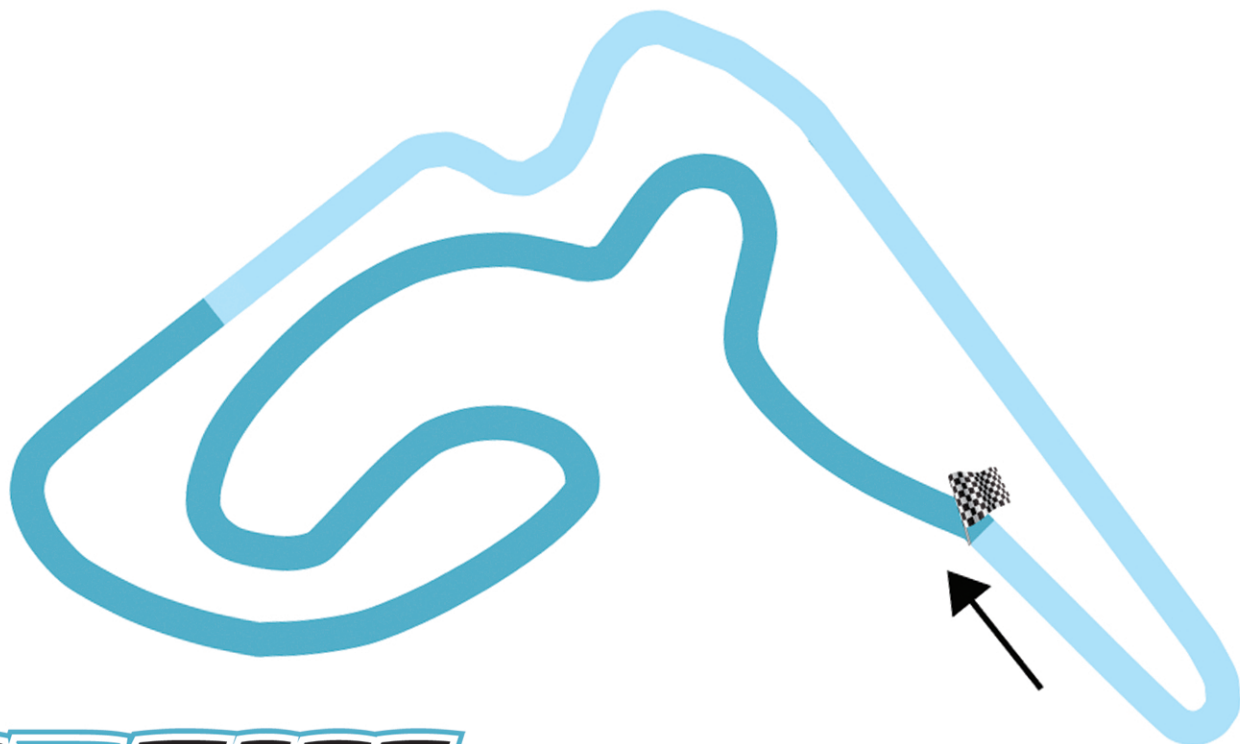

DRS125

DRY SET UP:

- Front wheel spacers use 25mm spacer on inside on front rims
- Rear wheel overall width: 138.5cms to 139cms
- Tyre pressure dry range guide 8psi - 11 psi.
- Always use the same pressure in the fronts and rears.
Look for a working pressure gain of 1 to 2 psi

WET SET UP:

- Full spacers inside front rim
- Rear wheel overall track: 134cms to 135cms
- In very wet conditions try running 5 to 8 mm toe out on front tracking to increase grip on turn in.

TYRE PRESSURES:

- Grease 12 psi wet 15 psi and for monsoon wet 18 psi
- Carb setting start off with 60mins low jet - main jet 89/90
- Designated Sprocket rear size 85T - chain length CZ 104L
- Flex Length: 60mm - 70mm

DRS

DANIELRICCIARDOSERIES