


SHENINGTON

SET UP GUIDE

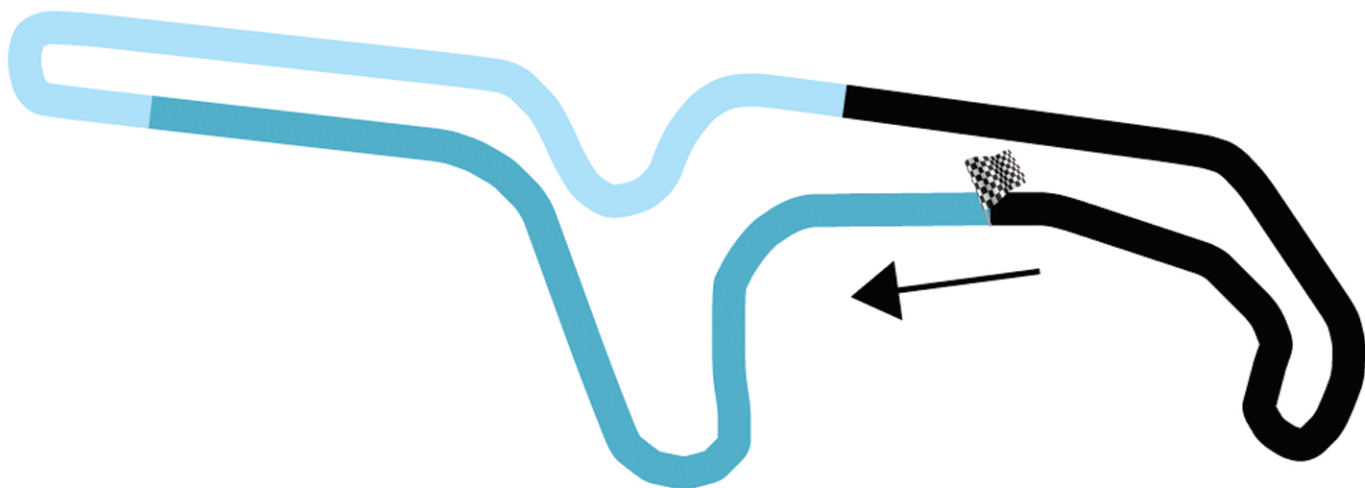

DRS100

DRY SET UP:

- Front wheel spacers use 40mm spacers on inside on front rims
- Rear wheel overall width: 137cms to 138cms
- Tyre pressure dry range guide 10psi - 13psi.
- Always use the same pressure in the fronts and rears.
Look for a working pressure gain of 1 to 2 psi

WET SET UP:

- Full spacers inside front rim
- Rear wheel overall track: 134cms to 135cms
- In very wet conditions try running 5 to 8 mm toe out on front tracking to increase grip on turn in.

TYRE PRESSURES:

- Grease 14 psi wet 18 psi and for monsoon wet 22 psi
- Carb setting start off with 55 mins low jet - main jet 83/84
- Designated Sprocket rear size 76t - chain length CZ 100L
- Flex length: 60mm - 70mm

DRS

DANIELRICCIARDOSERIES