


LLANDOW

SET UP GUIDE

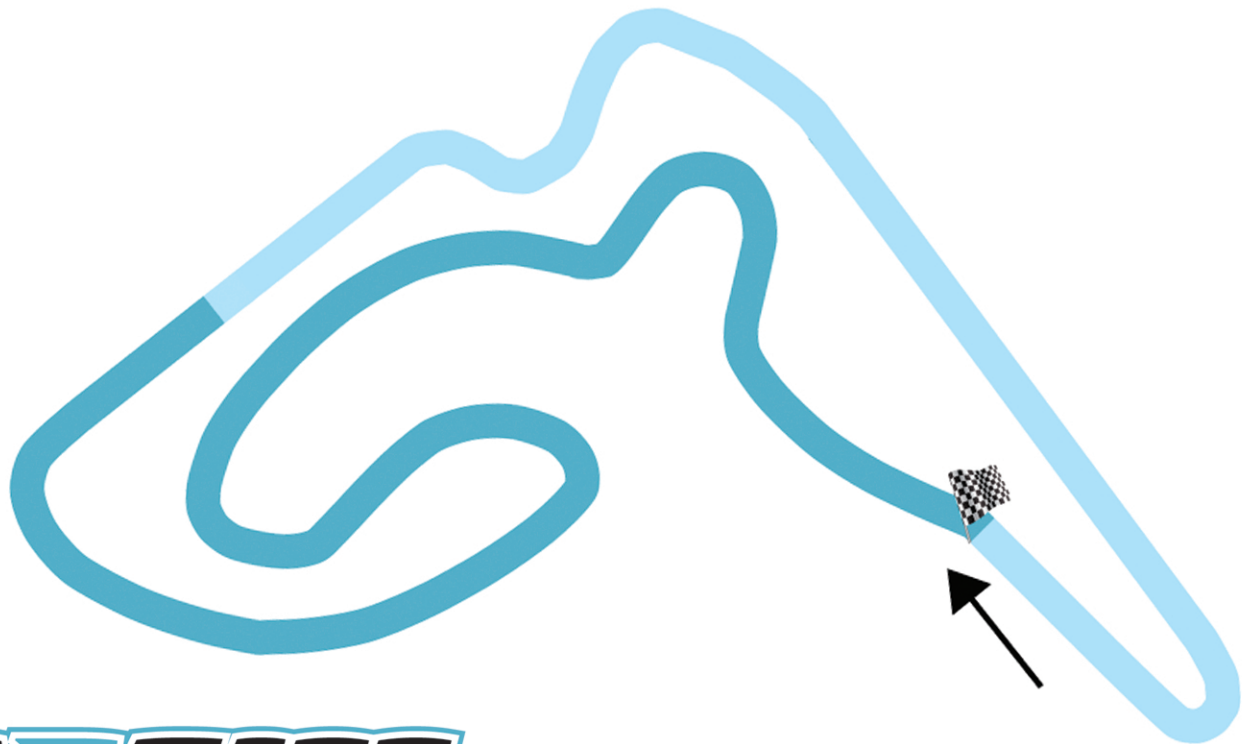

DRS100

DRY SET UP:

- Front wheel spacers use 40mm spacer on inside on front rims
- Rear wheel overall width: 138cms
- Tyre pressure dry range guide 8psi – 11 psi.
- Always use the same pressure in the fronts and rears.
Look for a working pressure gain of 1 to 2 psi

WET SET UP:

- Full spacers inside front rim
- Rear wheel overall track: 135cms to 136cms
- In very wet conditions try running 5 to 8 mm toe out on front tracking to increase grip on turn in.

TYRE PRESSURES:

- Grease 12 psi wet 15 psi and for monsoon wet 18 psi
- Carb setting start off with 50mins low jet – main jet 83/84
- Designated Sprocket rear size 85T – chain length CZ 106L
- Flex Length: 60mm – 70mm

DRS

DANIELRICCIARDOSERIES